

Check the fuel and engine oil level before starting the engine.

1



Turn the fuel valve lever to the ON position.

4



Turn the engine switch to the ON position.

2



Move the choke lever to the CLOSED position.

5



Pull the starter grip lightly until you feel resistance, and then pull briskly.

3



Move the throttle control lever slightly to the left.


6



Gradually move the choke lever to the OPEN position as the engine warms up.




* Read and understand the Owner's Manual before operating the engine.

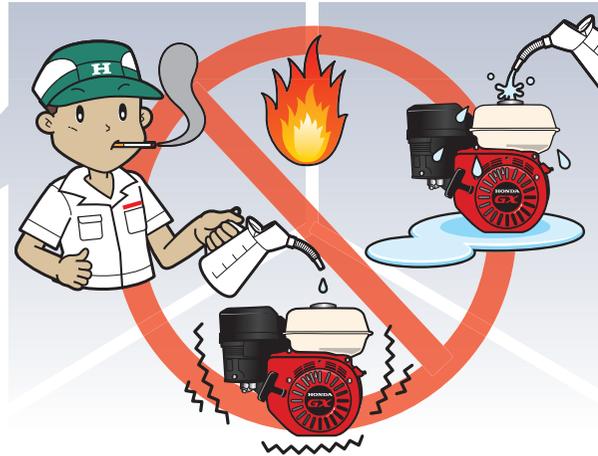

Safety! be careful!

✓ Safety! Be careful!

✓ Do not use inside house

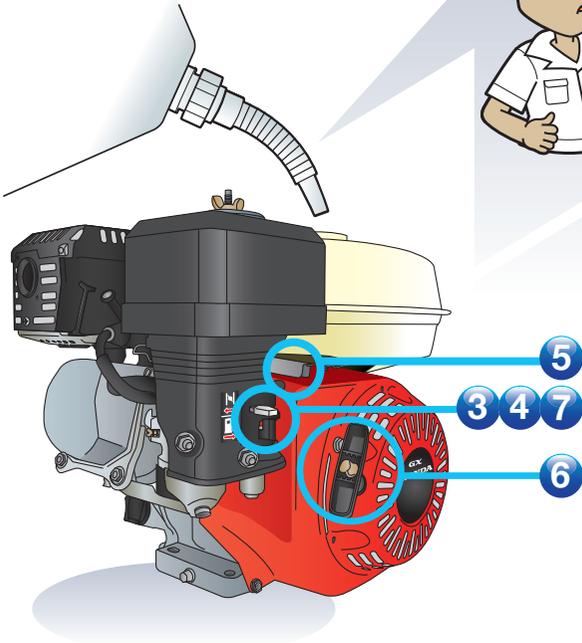


▶ How to start

▶ How to stop 5 → 2


1 Check engine oil



2 Switch ON

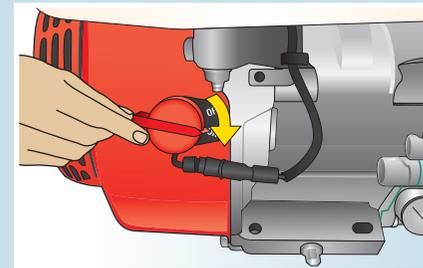


3 Choke ON/OFF

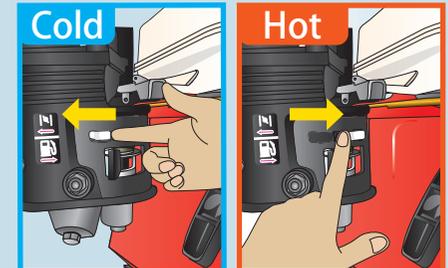


4 Fuel cock ON




5 Throttle lever

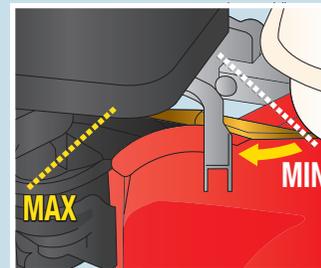

6 Start

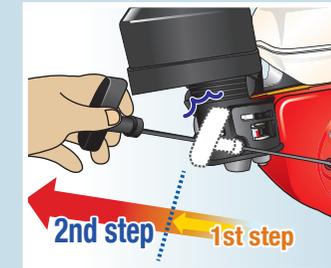

7 (Choke off)

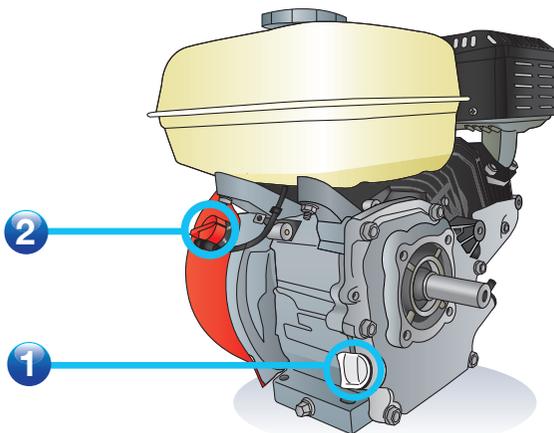




Maintenance Schedule


| Item | Regular service Period | Before each use | First month or 20Hours | Every 3 months or 50Hours | Every 6 months or 100Hours | Every year or 300Hours |
|-----------------------------------|------------------------|------------------|------------------------|---------------------------|----------------------------|------------------------|
| Engine Oil | | ● check fill/add | ⊗ replace | | ⊗ replace | |
| Air Cleaner | | ● check | | ■* | ■* | |
| Spark Plug | | | | | ▲ check readjust | ⊗ replace |
| Spark arrester (applicable types) | | | | | ■ clean | |
| Fuel filtration cup | | | | | ■ clean | |
| Idle speed | | | | | | ▲ check readjust |
| Valve Clearance | | | | | | ▲ check readjust |
| Combustion chamber | | | | Every 500Hours | | |
| Fuel tank and filter | | | | | ■ clean | |
| Fuel tube | | | | Every 2years | | |

* Clean the aircleaner when used in dusty areas every 10hours or once a day

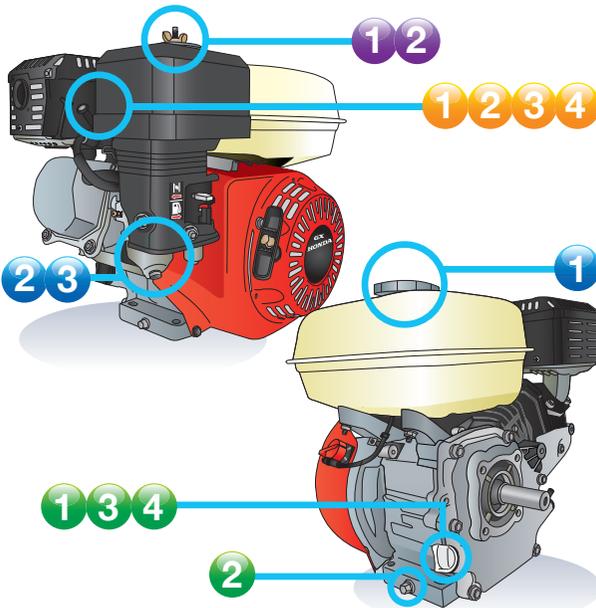


* Read and understand the Owner's Manual before operating the engine.


▶ Spark Plug

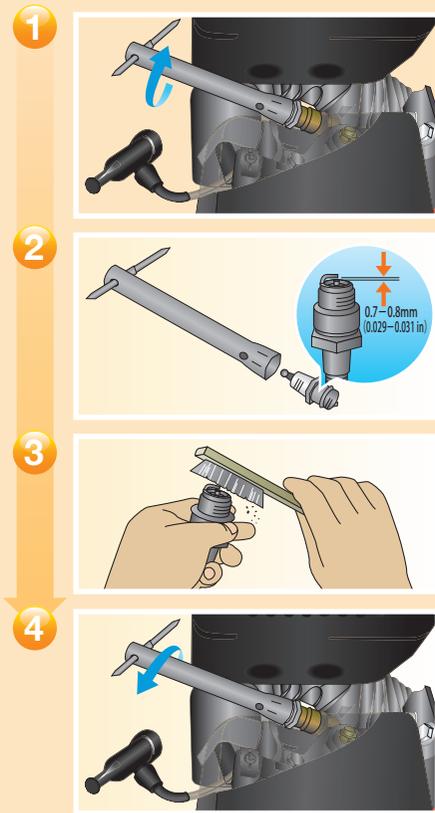

▶ Engine Oil

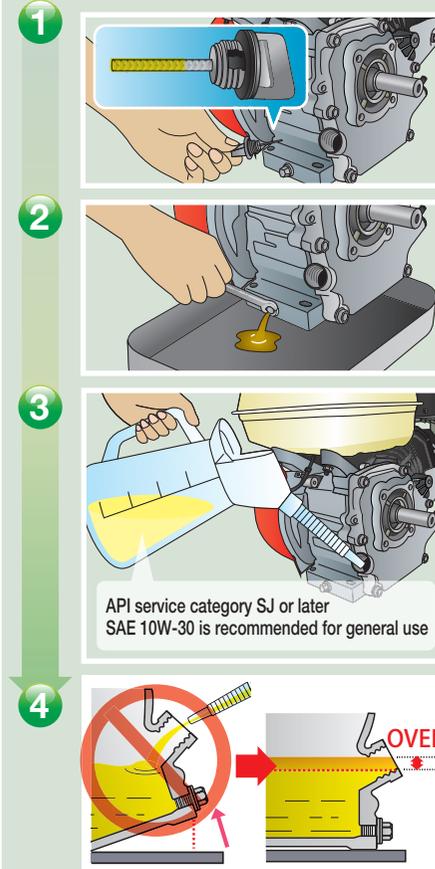

▶ Prolonged storage

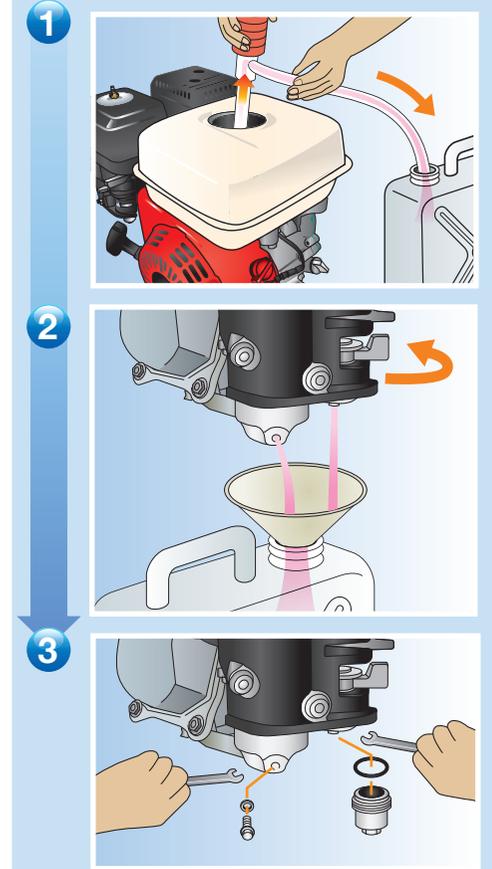

▶ Air Cleaner Element

