User guidelines litter bins Pioneer







Cleaning Products should be flushed with clean water and then washed with a mild detergent solution using a bristle brush or sponge. Care should be taken not to apply undue pressure that may damage labels. Flush clean with water after washing.



Manufacturing Standard (as applicable) All are manufactured to BS EN ISO 9002. Plastic materials: Mechanical properties tested to BS 2782 Hot dipped galvanized: BS 729 Powder coating: BS 3900 Zinc coating: BS 1706







PPE Always wear appropriate PPE equipment and follow safety guidelines


Unlocking and opening door



Insert key rod into key hole on top left hand side of bin. Push key in until it will go no further, lock will disengage



under bin aperture

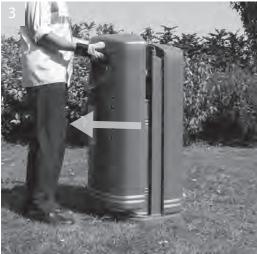

Leaving key inserted lift door upward gripping. With door lifted to highest position pivot in an anticlockwise direction and remove key. Once opened, the door will be supported on the bin body

Removing and replacing liner



Pivot door open until it stops




Grip liner using two handles, remove from bin body and empty contents




Replace liner sliding the liner in until it will go no further

Closing door - Engaging lock

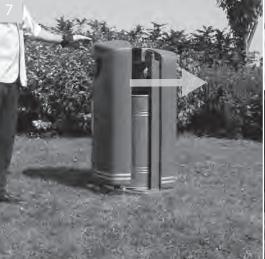

Standing away from the path of the door, firm y Once bin door meets bin body the door will push the door closed

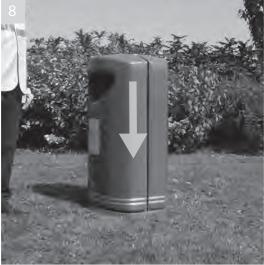

locate onto body and drop down to its lowest level and engage the lock

Variant: keyless locking version

The keyless locking bins opening and closing sequence is identical to that of the key locking version described in stages one to eight. The exception being no key is required to disengage lock


Variant: Ashtray



From door aperture reach inside the bin and grip the lip on the ashtray hinge flap



Pivot the ashtray flap downwards until it is vertical. Contents will fall into the liner below

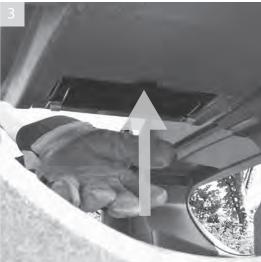

Once the contents of the ashtray has fallen into the liner release grip, the sprung hinge will return the flap to its closed position