
## melba swintex




The Darcy Bin has the option to be either weighted down with a concrete base, or to be fixed to the pavement or similar surface using bolts.


For the weighted base, the bins require a 750 x 750 x 80mm circular base. Simply insert this into the bin. The concrete ballast must be requested on order of the bin.

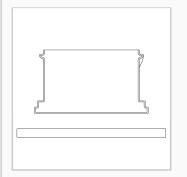


1] Place bin over pavement slab.

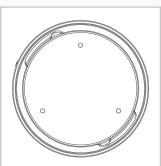


2] Insert fixing plate inside the bin.

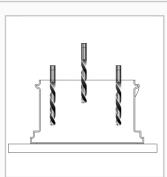


3] Using Fixing Plate as a guide, drill 3 x M10 holes 80mm deep.

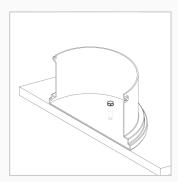


4] Secure the bin to the base using 3 bolts. Place liner into bin to cover over fixing.

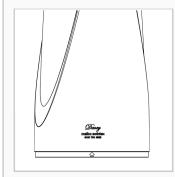

1] Align the Home symbol with the Bin embossing on the side.

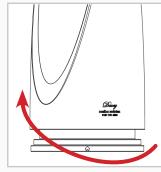

2] Begin to turn the Bin Clockwise, lifting upwards.

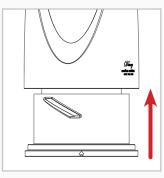

3] The Bins slots will locate onto the Base and begin to lift off.



4] Completely remove the Bin to gain access to the Liner.

