


INSTALLATION INSTRUCTIONS

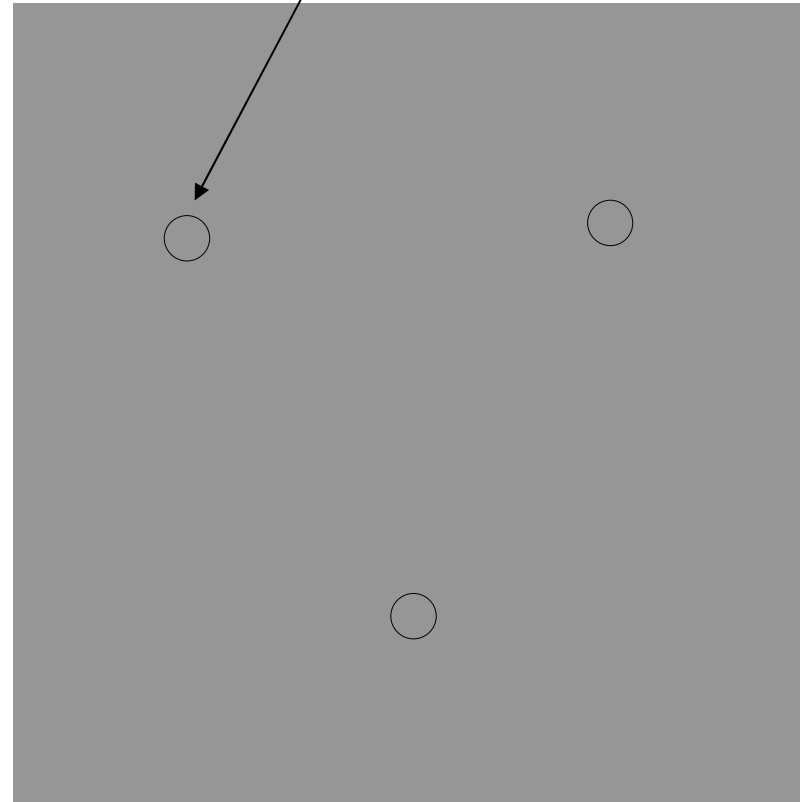

With the top of the bin removed place the bin in the required position and using a piece of chalk or small masonry drill bit mark the hole locations

Drill each hole to a depth of 110mm and insert the ground anchor sleeve



Using a 16mm masonry drill bit drill the three marked holes and insert the ground anchor sleeve



Place the bin body over the installed ground anchors
the insert the bolt complete with washer and tighten up
in place.

Once in position replace the bin top.