


EnviroBuddies

ASSEMBLY OF EYES

Envirobin Products



Cleaning Products should be rinsed with clean water and then washed with a mild detergent solution using a bristle brush or sponge. Care should be taken not to apply undue pressure that may damage labels. Flush clean with water after washing.



Tools
5mm Hex Key (included)




Quality Standards All products are certificated to BS EN ISO




PPE Always wear appropriate PPE equipment and follow safety guidelines.

1

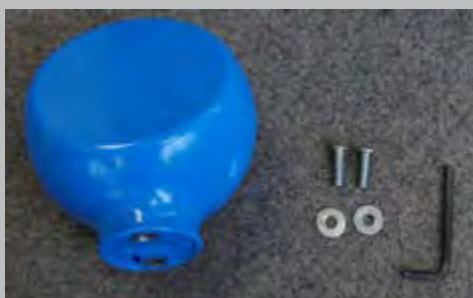

Your fitting Pack- To fit each Buddy eye you will require: eye mouldings x 2, Button head bolts x 4, washers x 4, 5mm Hex key x1.

2

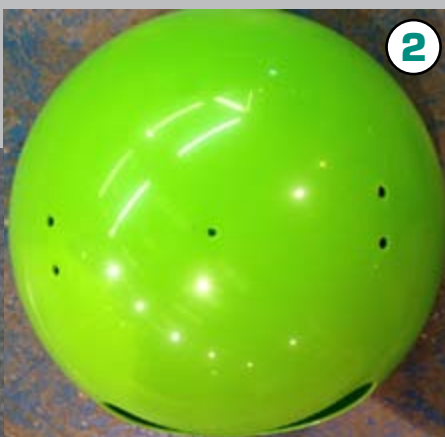

Your Buddy dome lid will be provided with pre-drilled fixing holes as shown above.


3



Insert one button head bolt & washer through the pre-drilled hole in the lid. Remember to feed the bolt and washer from the inside of the dome lid to the outside.



Align the eye moulding up then screw the first bolt and washer in a couple of turns. Then insert the second bolt and washer also tightening a couple of turns.

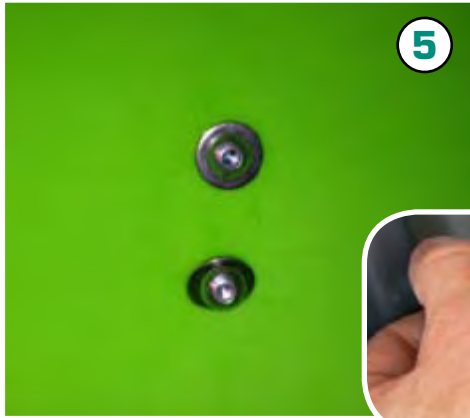

With both eye mouldings in position fully tighten up the dome head bolts using a 5mm allen key.



Final alignment should be as above.