

Installation guide

Octaplius Maxi



litter products



Cleaning Products should be rinsed with clean water and then washed with a mild detergent solution using a bristle brush or sponge. Care should be taken not to apply undue pressure that may damage labels. Flush clean with water after washing.



Quality Standards All products are certificated to BS EN ISO 9001:2000 and BS EN ISO 14001:2004.



Tools Chalk, Hammer, drill, 12mm masonry drill bit, 12.5mm drill bit, 17mm socket or spanner, Key.



PPE Always wear appropriate PPE equipment and follow safety guidelines.

Marking out holes



To insure the correct bin alignment, place the metal bracket so that it aligns with the lock hole in body (as shown).




Using the plate as a guide drill 3 x 13mm holes in base of bin.



Mark the position through the three holes onto the ground below using the bracket as a guide.

Drilling holes

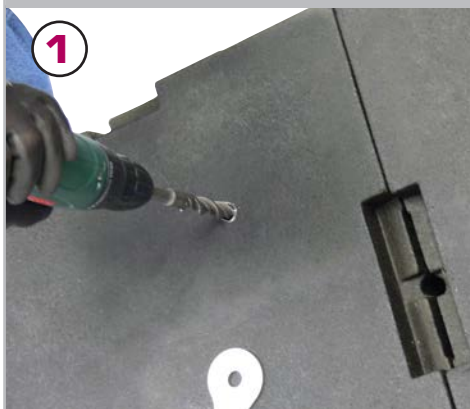

Drill 3 x 12mm holes in the ground to a depth of 100mm to accommodate the bolt length and remove debris from holes.

Place bin base over drilled holes

Affixing to floor



Place anchor plate inside bin over the drilled holes

Insert fixings through the anchor plate and bin base and into the drilled holes. A hammer may be required.

Replace liner and hood. (LOCK)

Contents:

From left to right:
3 x 12mm x 110mm fixings
1 x anchor plate

