

Installation guidelines

litter bins

Square Heritage



Cleaning Products should be flushed with clean water and then washed with a mild detergent solution using a bristle brush or sponge. Care should be taken not to apply undue pressure that may damage labels. Flush clean with water after washing.




Manufacturing Standard (as applicable)

All products are manufactured to BS EN ISO 9002.
Plastic materials: Mechanical properties tested to BS 2782 Hot dipped galvanized: BS 729
Powder coating: BS 3900 Zinc coating: BS 1706



Tools Chalk, hammer drill, 12mm masonry drill bit, mallet, 17mm socket, Key:

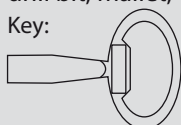

PPE Always wear appropriate PPE equipment and follow safety guidelines

Preparation




1 Position the bin so that the bin door faces the correct direction and is not obstructed

2 Using chalk, mark the position through the four holes in the bin base onto the ground below

3 Remove bin body and clearly mark the ground in the four hole positions with a cross

Ground fixing kit additional components: Available as optional extra.

Ground fixing bolt

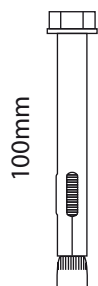

X3

Washer



X3

Ground fixing to asphalt is not recommended

Drilling holes and inserting bolts



4 Drill 12mm holes in the four marked positions to a depth of 100mm to accommodate the bolt length. Remove debris from holes



5 Re-position the bin over the drilled holes. Add washers to bolts and push through moulded holes in base into drilled ground holes




6 Using a mallet drive the bolts home

Tightening bolts



7 Use a spanner or socket to tighten the bolts

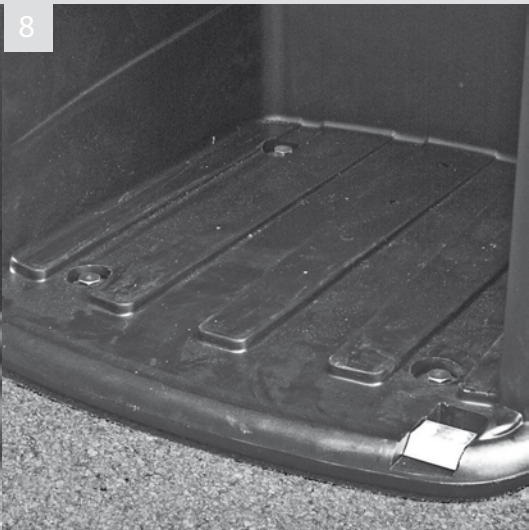

8 Tighten the bolts to 22.0Nm torque for concrete. Tightening the bolts will fan out the bolt sheath in the hole holding the bolt secure



9 Replace liner and shut door