
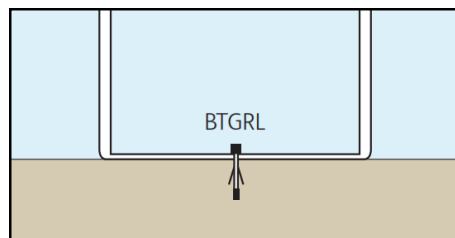


RAWL Bolt Instructions

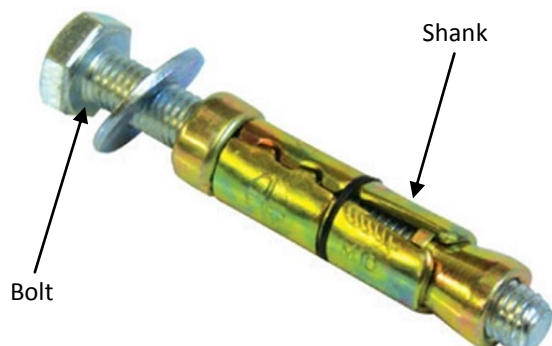

Tools Required:

- Hammer Drill
- 12mm drill bit (Suits M10 RAWL bolts)

Instructions:

1. Mark where the holes are required to suit the base of the bin
2. Drill a hole to the length of the bolts shank (do not exceed this length)
3. Insert the shank into the hole
4. Position the bin in place over the holes
5. Secure the bolts in place and tighten to secure



Kingfisher Direct Limited, Unit 12, Retford Enterprise Centre

Randall Way, Retford, Nottinghamshire, DN22 7GR

Tel: 01777 858009 Fax: 01777 858010