


Install & Operation Manual

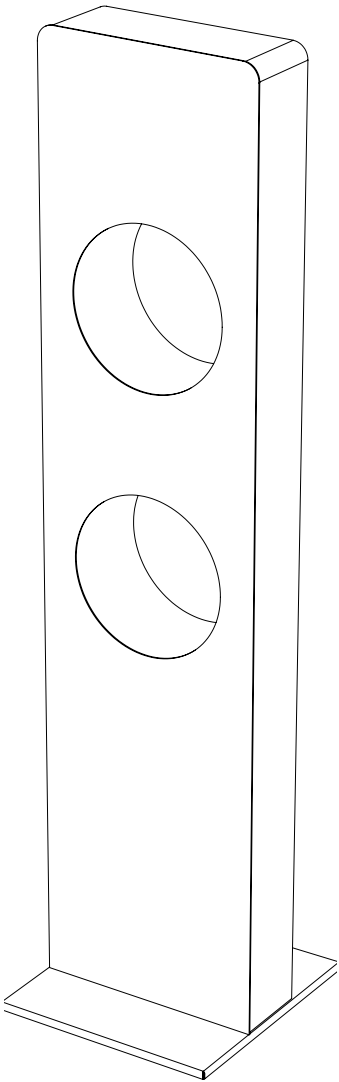

Contents	2	Introduction
	3	Technical Specification
		3 X4 Dimensions
		4 X5 Dimensions
		5 Electrical Diagrams
	6	Installation
		6 Major Components
		7 Before Installation
		7 Mounting
	8	Commissioning
	9	User Instructions
		9 Operation
		9 Functions and Control
	10	Maintenance
		10 Refilling the X4 X5 Unit
		11 Replacing the Batteries
		12 Silicone Hose and Outlet
		12 Stainless Steel Care
	14	Fault Finding
	15	Spares



Contact Us

Sterizen® (Azure Corporate)
Synergy House, Fakenham Road
Morton On The Hill
Norfolk, NR9 5SP
United Kingdom

Email: sales@sterizen.com
Telephone: +44 (0)1362 656 928

Introduction

Models


The X4/X5 model is a free standing hand sanitiser station. It is a self-contained machine with a robust stainless steel frame cabinet and an attractive acrylic front.

This hand sanitiser unit is manufactured to the highest standards and has been designed to meet all the latest relevant safety specifications. Please read and understand these instructions before starting work. Please leave these instructions with the user following installation. Particular attention should be paid to the section headed installation.

The hand sanitising station must not be sited outside or in any location where it could be exposed to the weather. It must be installed in a dry environment.


In the Box - X4

- X4 Unit
- Base with fixing screws
- 4 x Adjustable Feet
- 1 x Hand Sanitiser Container
- 4 x C Type Batteries




In the Box - X5

- X5 Unit
- Base with fixing screws
- 4 x Adjustable Feet
- 1 x Hand Sanitiser Container
- 8 x C Type Batteries






Technical Specification

X4 Dimensions

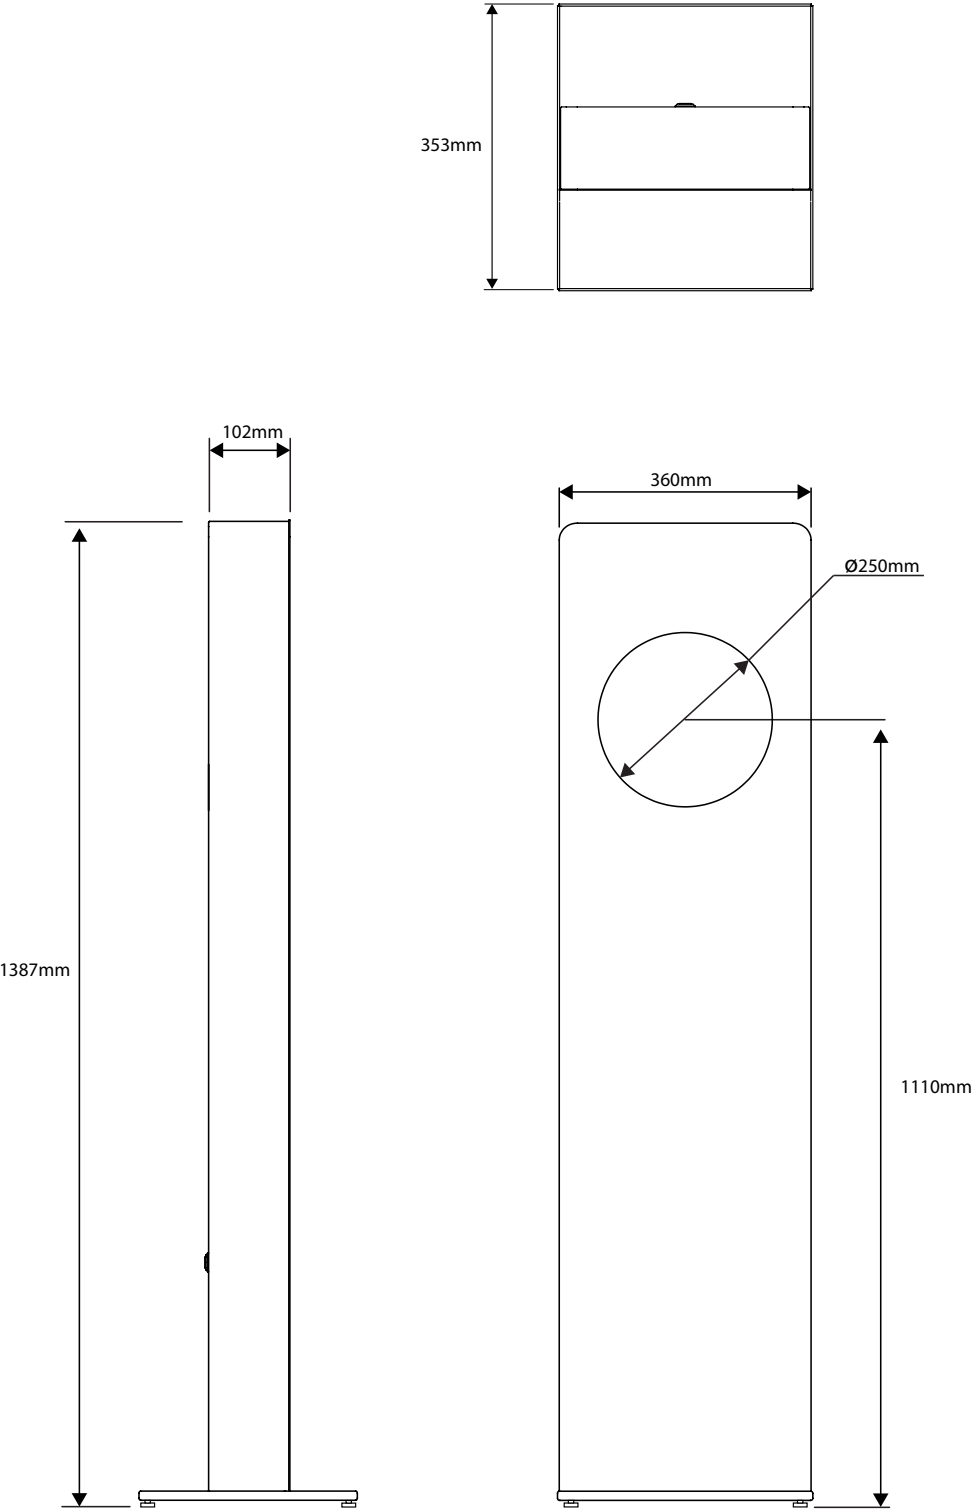

Technical Specification


X5 Dimensions

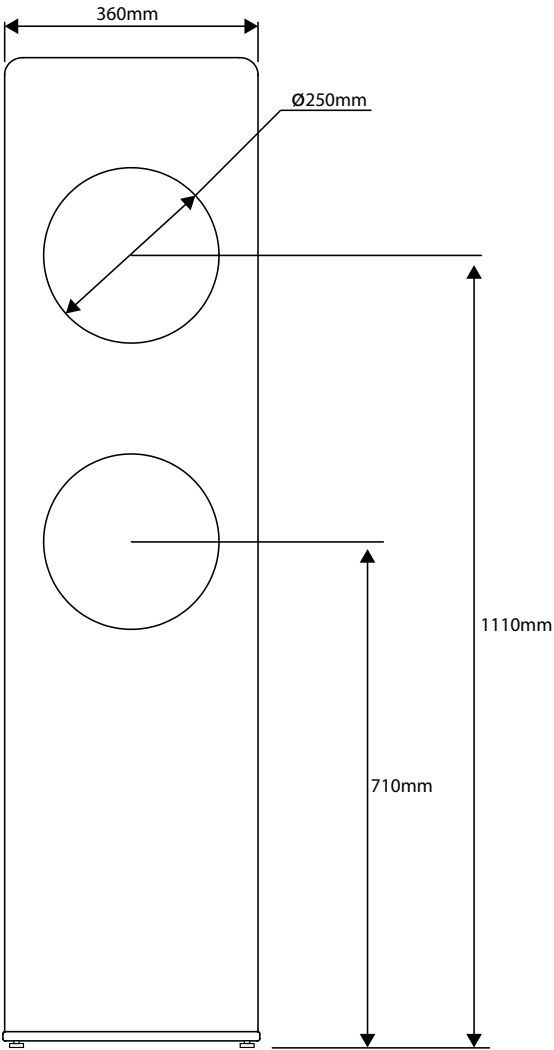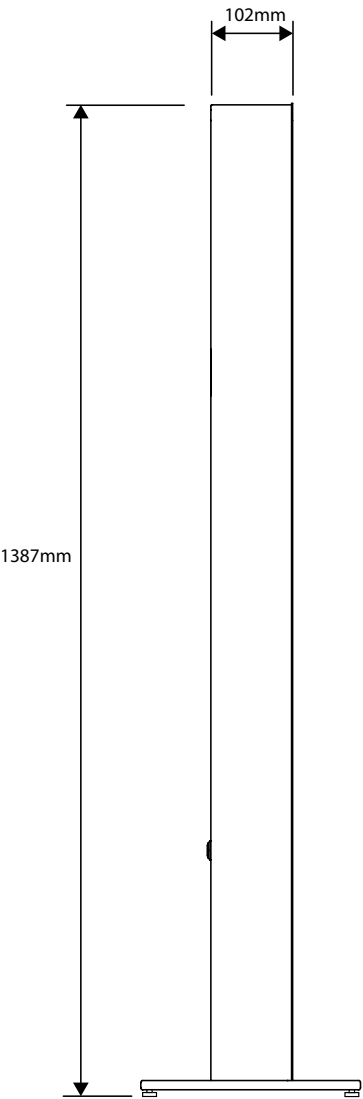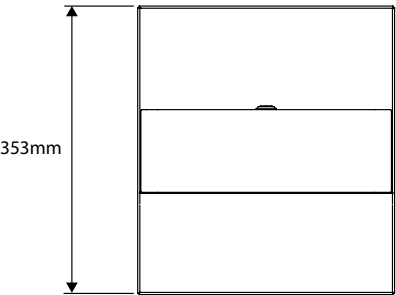


Technical Specification

Electrical Diagrams

X5

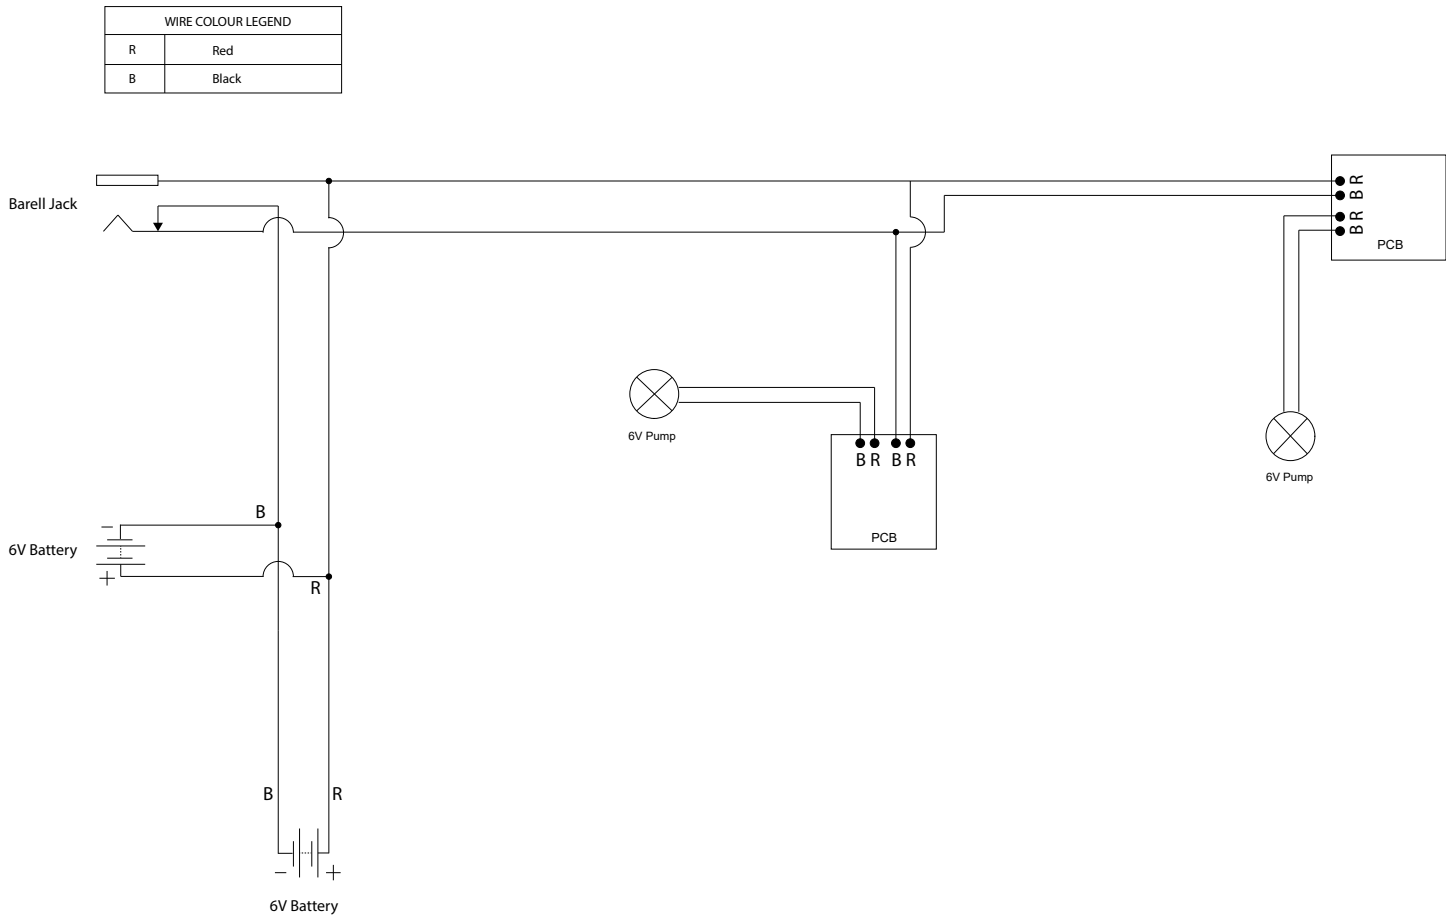


X4

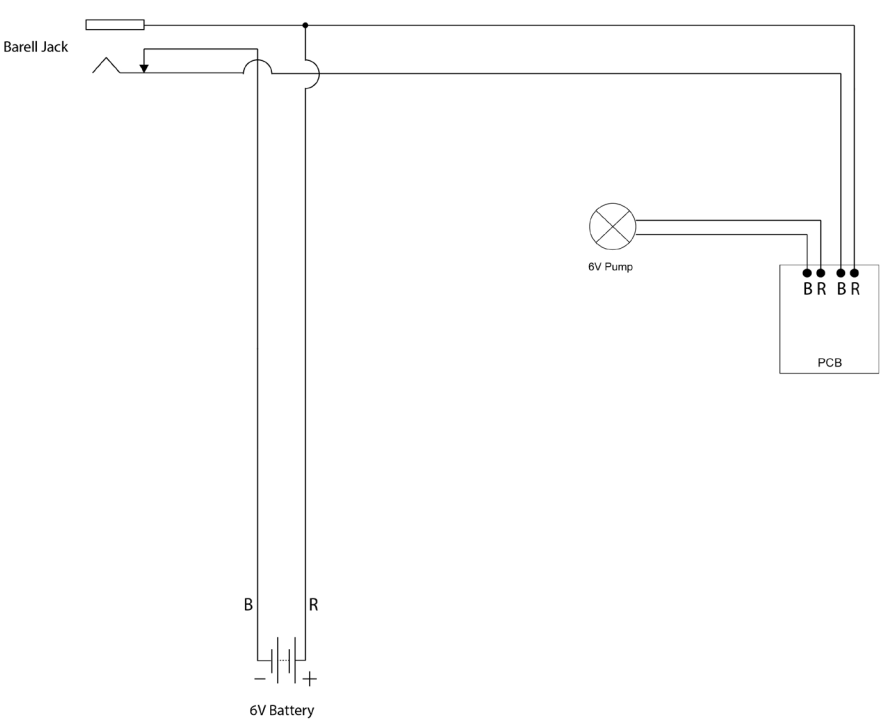

Installation

Major Components

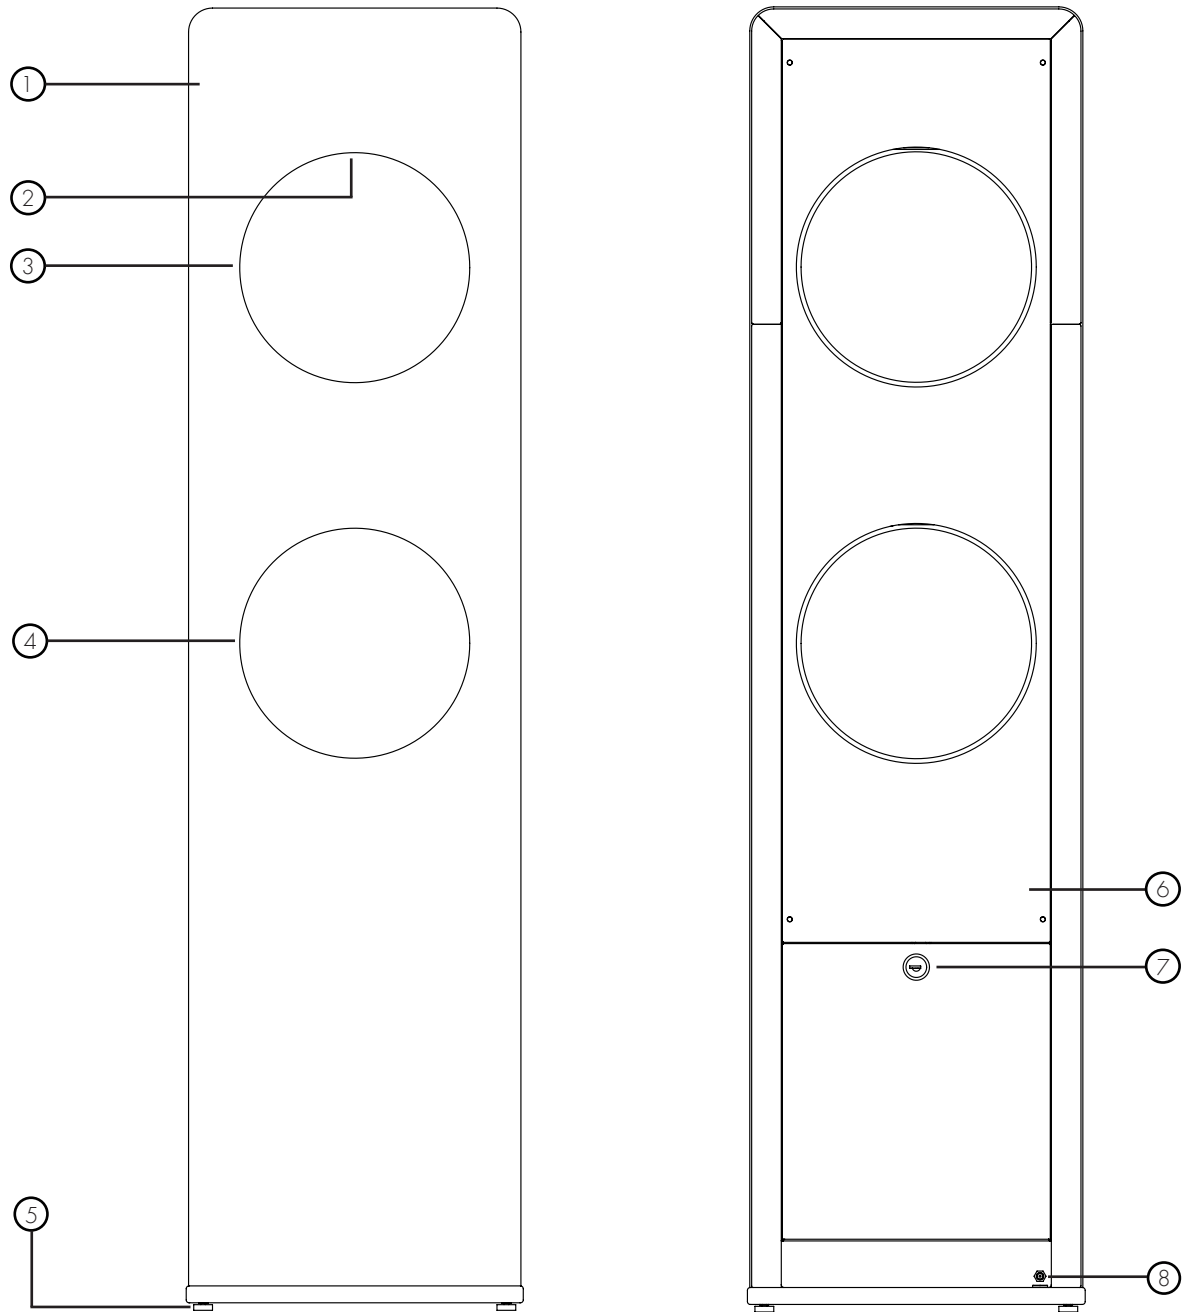


Note: Model shown is X5

1	ACRYLIC PANEL	5	ADJUSTABLE FEET
2	DISPENSE OUTLET	6	SERVICE PANEL
3	TOP APERTURE	7	ACCESS PANEL LOCK
4	LOWER APERTURE	8	POWER JACK SOCKET

Installation


Before Installation

Before installation allow adequate space to install the appliance. Rear access is required to refill the unit or change the batteries.

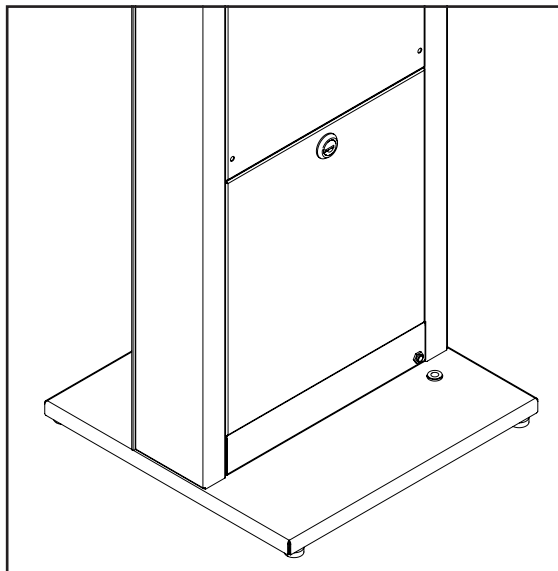


Mounting

Due to it being battery operated the X4/X5 is a free standing model designed to fit in any space. Where it requires to be mains powered ensure there is a nearby power socket.

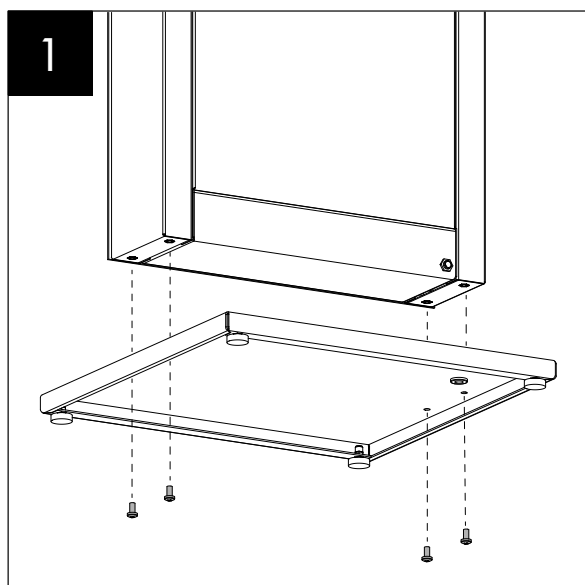


Lay down the cabinet on its side on a soft surface to avoid scratching. Fit the base to the underside of the unit and fix with the 4 screws provided.

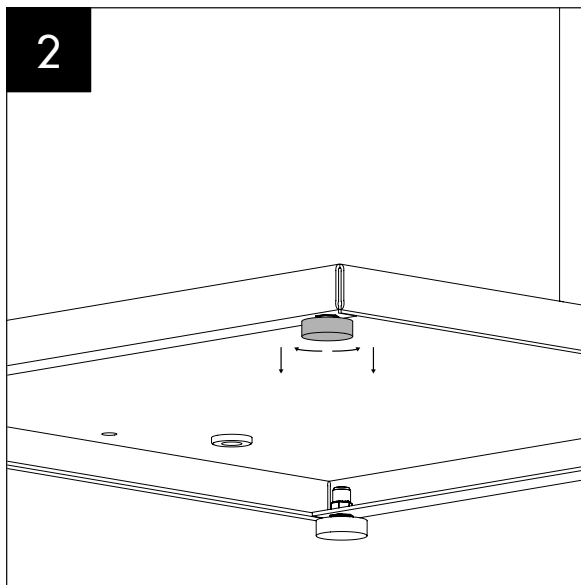


The cabinet can then be levelled using the 4 adjustable feet on the underside of the base.

Note: Ensure the grommet is located to the rear of the unit.


Commissioning

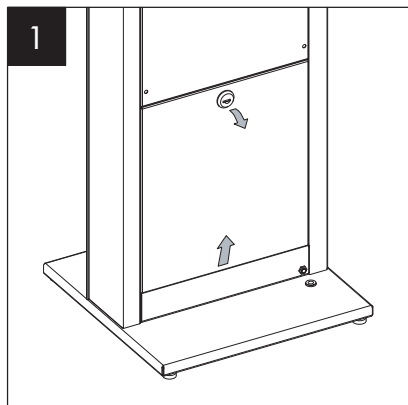


Remove the rear access cover located at the rear of the unit by unlocking the catch and then lifting up the cover.

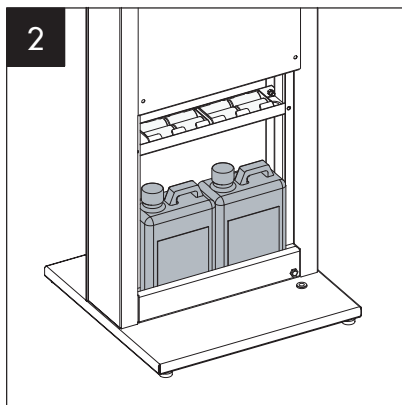


Sit the containers into the base. Remove the lids and peel back the safety cap.

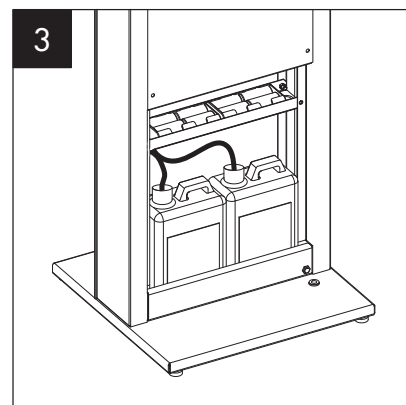

Insert the hoses into the containers ensuring they are pushed to the bottom.

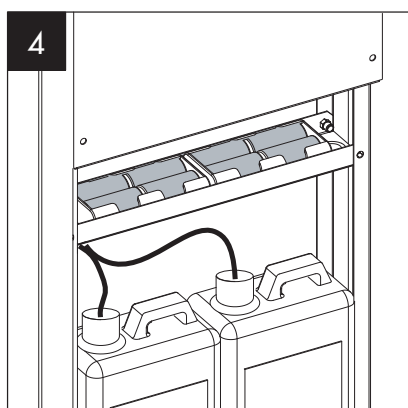

Insert the provided batteries into the battery holder. Take care to ensure all batteries are inserted with the correct polarity as shown inside the battery compartment.

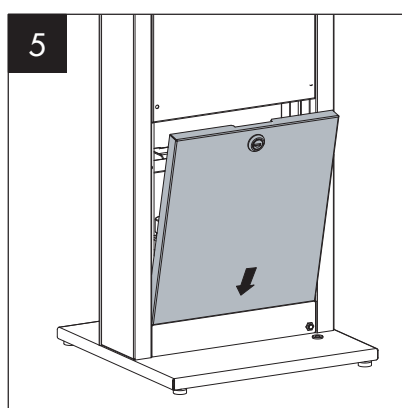

Fit rear panel back on and lock.

NOTE: PLEASE REFER TO PAGE 11 FOR FULL INFORMATION ON BATTERY OPERATION.

For first time use it is required to prime the pump so the sanitiser gel is close to the outlet. To do this, repeatedly place your hands under the sensor until the unit starts to dispense the sanitiser gel.

The unit is now ready for use.


User Instructions

Operation

The X4/X5 is a touchless operation unit.

To operate you simply place your hands through the centre of either the top or bottom aperture to dispense the hand sanitiser. A blue LED indicator will light up when in operation.


Function and Controls

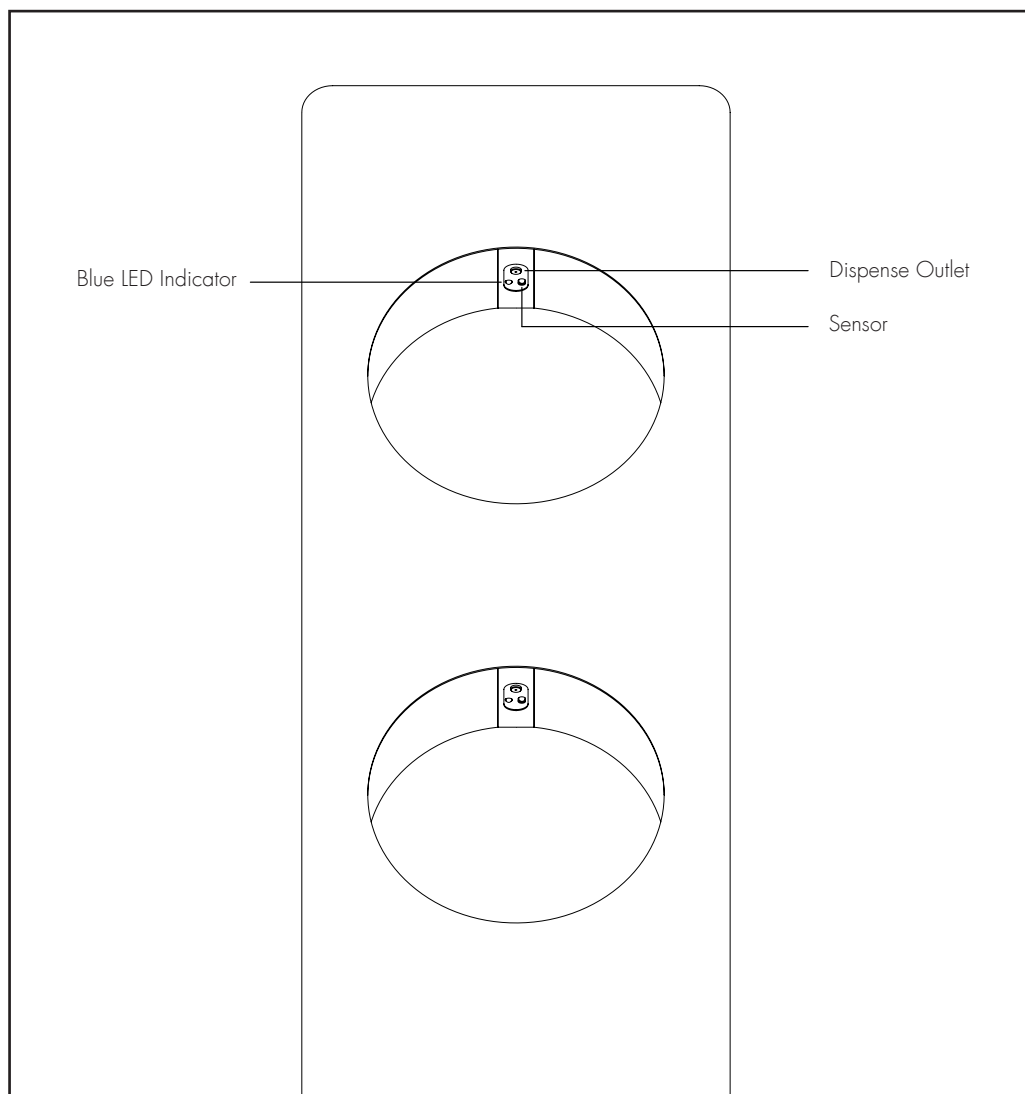


Maintenance

Refilling the X4 X5 Unit


The X4 X5 has been designed so it can be quickly and easily refilled. To do so please follow the below instructions.

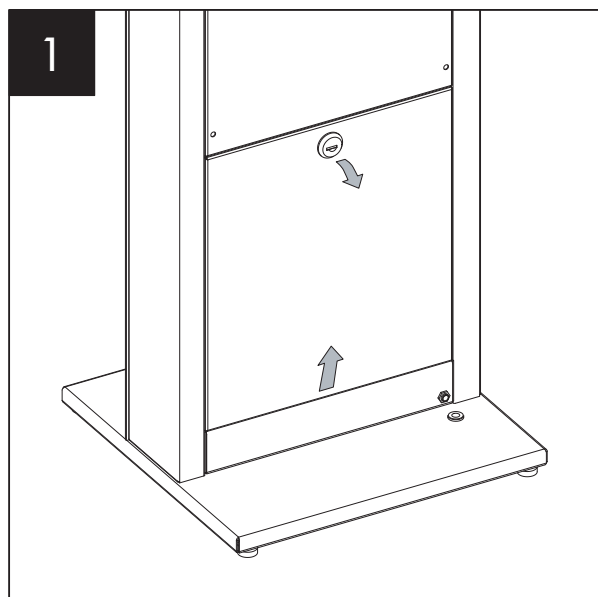

Remove the rear access cover located at the rear of the unit by unlocking the catch and then lifting up the cover.



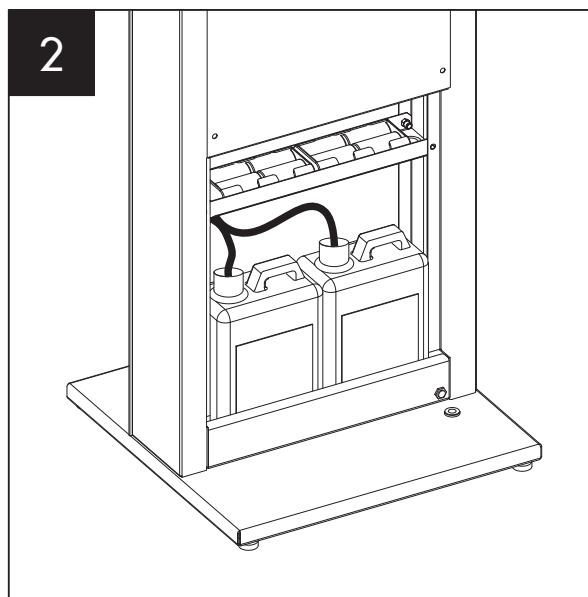


Remove silicone hoses and either replace the sanitiser containers or top up as required. Insert the hoses back into the bottom of the containers.

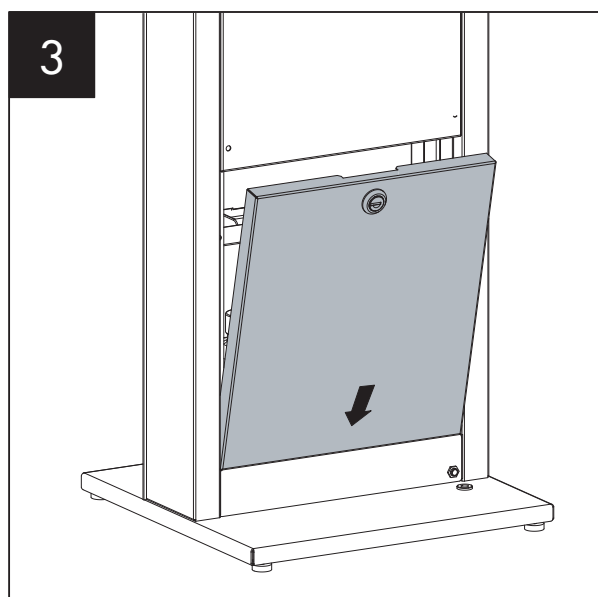

Fit rear panel back on and lock.

Replacing the batteries

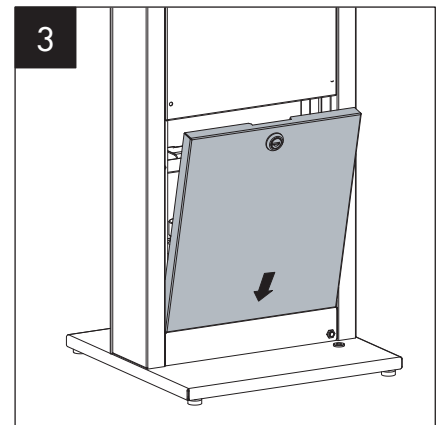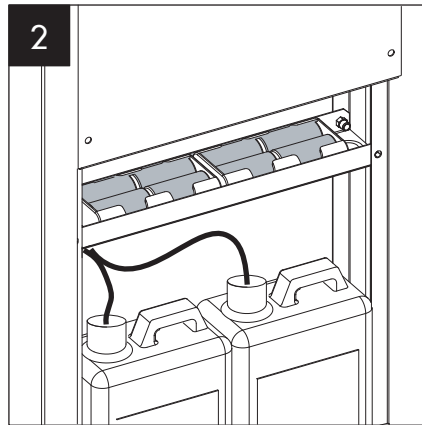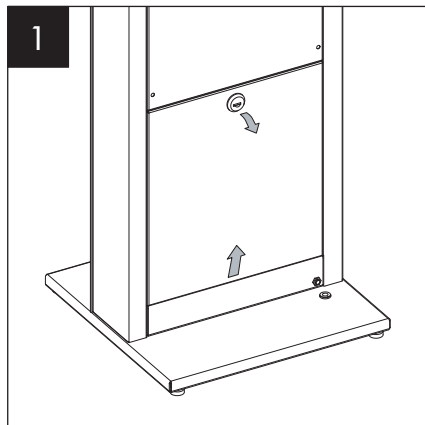

Battery Operation

1. Remove the rear access cover located at the rear of the unit by unlocking the catch and then lifting up the cover.
2. Insert four C Type batteries into the spaces in the compartment. Take care to ensure all batteries are inserted with the correct polarity as shown inside the battery compartment.
3. If the pump or LED starts to stutter or stop this is signs that the batteries may need replacing.
4. If the unit is not to be used for any extended period of time it is recommended that the batteries are removed from the unit.


Caution: Replace batteries only with the same or equivalent type. Danger of explosion if the batteries are incorrectly replaced.

Correct disposal of the batteries in this product

(Applicable in countries with separate collection systems)

This marking on battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

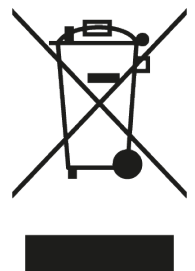

Silicone Hose and Outlet

If left for a sustained period of time the hand sanitiser gel can start to congeal in the hoses and around the stainless steel outlet. Regular cleaning of these components will help improve performance. To do this simply disconnect the hoses and clean through with warm water. The outlet can be easily cleaned in situ.

Care and Maintenance of Stainless Steel

Introduction

All grades of stainless steel will stain and discolour due to surface deposits and can never be accepted as completely maintenance free. In order to achieve maximum corrosion resistance the surface of the stainless steel must be kept clean. Provided the grade of stainless steel and the surface finish are correctly selected, and cleaning schedules carried out on a regular basis, good performance and long service life are assured.

Factors Affecting Maintenance

Surface contamination and the formation of deposits must be prevented. These deposits may be minute particles of iron or rust from other sources used on the building of new premises and not removed until after the stainless steel items have been fixed. Industrial and even naturally occurring atmospheric conditions can produce deposits which can be equally corrosive, e.g. salt deposits from marine conditions.

The working environment also offers more aggressive conditions e.g. hot humidity, such as in a swimming pool, increases the speed of discolouration and therefore requires the maintenance to be on a more frequent basis. Modern processes use many cleaners, sterilizers and bleaches for hygienic purposes. All these proprietary solutions, when used in accordance with makers instructions are safe but if used incorrectly (e.g. warm or concentrated) can cause discolouration and corrosion on the surface of any quality of stainless steel. Strong acid solutions are sometimes used to clean masonry and tiling of buildings, but they should never be permitted to come into contact with metals, including stainless steel. If this should happen the acid solution must be removed immediately and copious applications of water.

Maintenance Programme

With care taken during fabrication and installation, cleaning before handing over to the Client should present no special problems, although more attention than normal may be required if the installation period has been prolonged. Where surface contamination is suspected, immediate attention to cleaning after site fixing will encourage a trouble-free product. Food handling, pharmaceutical, aerospace and certain nuclear applications require extremely high levels of cleanliness applicable to each industry.

Advice is often sought concerning the frequency of cleaning stainless steel and the answer is quite simple "clean the metal when it is dirty in order to restore its original appearance". This may vary from once to four times a year for external applications or it may be once a day for an item in hygienic or aggressive situations. Frequency and cost of cleaning is lower with stainless steel than with many other materials and will often outweigh the initial higher cost of this superior product.

PROBLEM	CLEANING AGENT	COMMENTS
Routine cleaning	Soap or mild detergent and water. (Such as Fairy Liquid)	Sponge, rinse with clean water, wipe dry if necessary
Fingerprints	Soap or warm water or organic solvent (e.g. Usher/Walker Thinners No PF8017, acetone, alcohol).	Rinse with clean water, wipe dry if necessary
Stubborn stains and discolouration	Mild cleaning solutions i.e Jiff, Goddard Stainless Steel Care	Rinse well with clean water, wipe dry if necessary
Rust and other corrosion products.	Oxalic Acid. The cleaning solution should be applied with a swab and allowed to stand for 15-20 minutes before being washed away with water. May continue using Jiff to give final clean	Rinse well with clean water. (precautions for acid cleaners should be observed)
Scratches on surface	Slight scratches. Impregnated nylon pads. Polishing with scuffs dressed with iron free abrasives. For deeper scratches; apply in direction of polishing. Then clean with soap or detergent as per routine cleaning	Do not use ordinary steel wool - iron particles can become embedded in stainless steel and cause further surface problems

Precautions



Acids should only be used for on-site cleaning when all other methods have been proved unsatisfactory. Rubber gloves should be used and care taken to see that acid cleaners are not spilt over adjacent areas. Special precautions are necessary with oxalic acid. Solvents should not be used in closed places. Smoking must be avoided when using solvents.

Fault Finding

Problem/Report	Possible Cause	Suggested Action
No sanitiser dispenses	Sanitiser container empty	Check and refill sanitiser container.
	Pump not working	Check probes connected/ leads attached. Check power supply to pump.
	No electricity/power supply	Check batteries and replace if necessary. Check power cord is connected and live.
	Blocked outlets/pipes	Check and unblock or replace as needed.
	Sensor PCB not working	Check/replace control PCB
Sanitiser lying in machine	Leak from outlet	Locate and repair accordingly
	Faulty sensor	Locate and repair accordingly

If you need further assistance, please contact our technical support team.

Spares

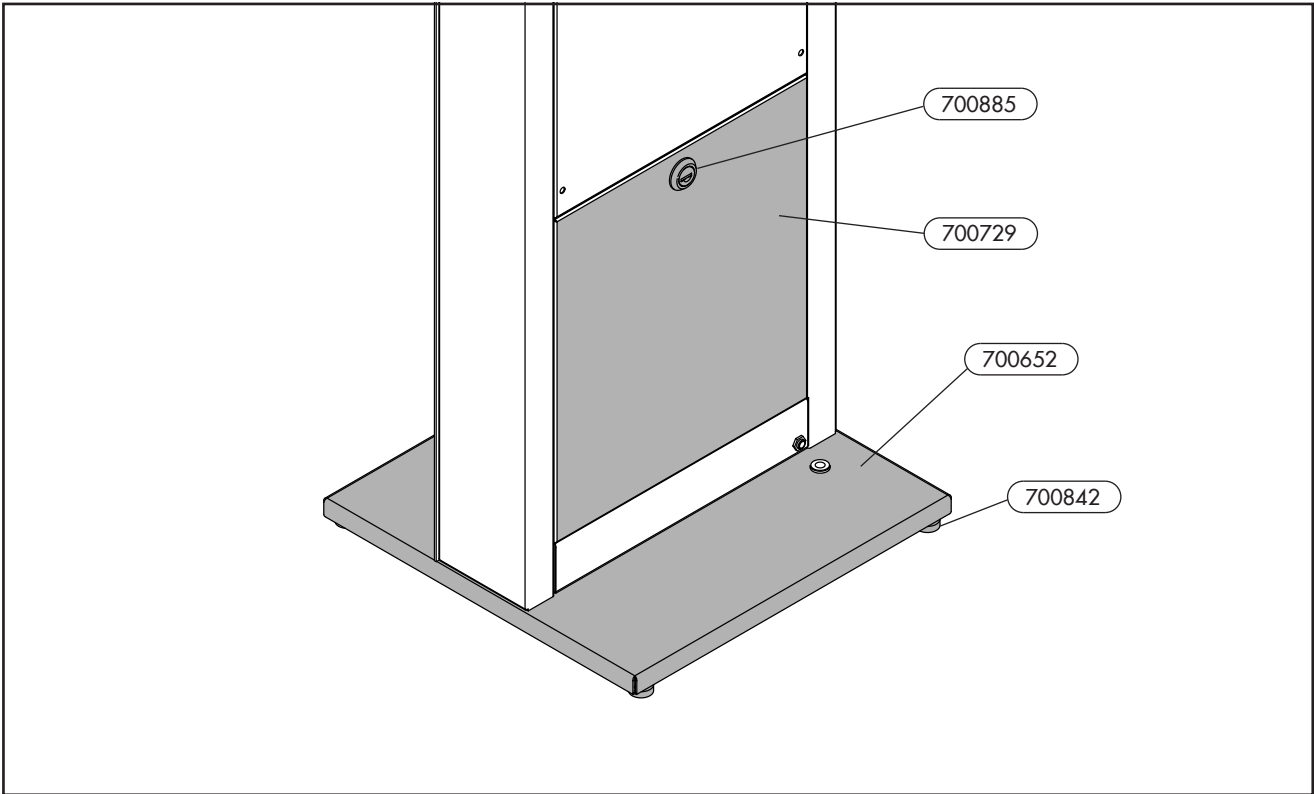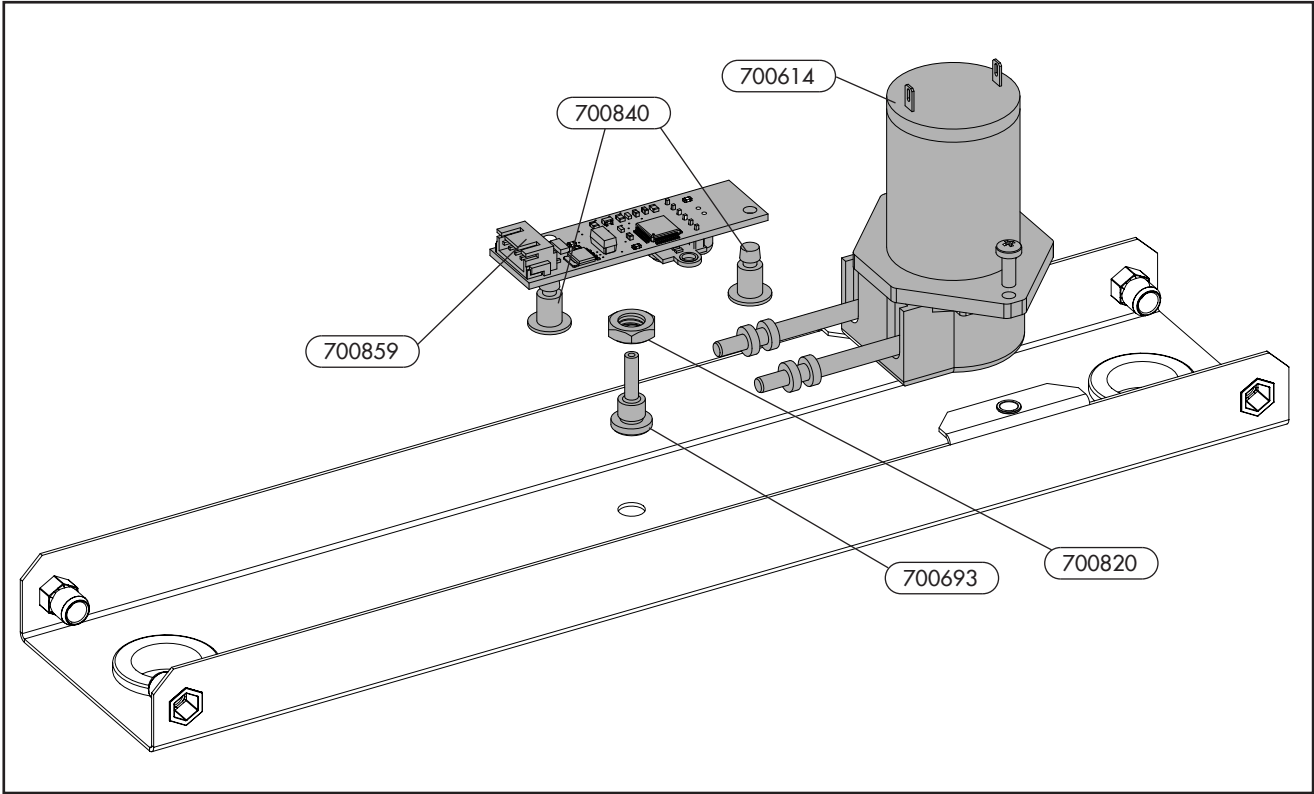

Parts List

Sterizen Part No	Description
700614	6V Pump with Connector Joints
700693	Stainless Steel Outlet
700820	Outlet Locking Nut
700859	Control Board with Sensor and LED
700840	PCB Mounting Supports
700885	Emka Lock and Cam
700729	Rear Access Door
700842	Adjustable Feet x 4
700652	Base Plate
700830	Silicone Hose

Accessories List

Sterizen Part No	Description
500679	1L Refill Container - Mighty Mint
500680	1L Refill Container - Energy Rush
500681	1L Refill Container - Citrus Zest
500682	1L Refill Container - Magenta Sky
700928	AC Mains Adapter
700899	Floor Fixing Kit

